# **3.1.1 TECHNICAL DATA**

MAX OPERATING PRESSURE (PS): 360 bar

PRESSURE TEST (PT): 1.43 x PS

NOMINAL CAPACITIES: 0.2 - 0.7 - 1 - 1.5 - 3 - 5 - 10 - 15 - 20 - 25 - 35 - 55 litres

**WORKING TEMPERATURE:** -40 ÷ +150 °C

COMPRESSION RATIO (Po: P2): max. 1:4

FLUID VISCOSITY RANGE: 10 ÷ 400 cSt

RECOMMENDED VISCOSITY: 36 cSt

FLUID CONTAMINATION DEGREE:

class 21/19/16 according to ISO 4406/99

#### **BODY MATERIAL:**

- carbon steel shell painted with rust inhibitor RAL 8012
- nickel coating 25 40 µ
- stainless steel AISI 316L
- internal and external coating with RILSAN th. 0.6 mm

#### VALVES MATERIAL:

- phosphated or galvanized carbon steel in compliance with
- Directive 2002/95/EC (RoHS) to resist to corrosion
- stainless steel AISI 316L
- nickel coating 25-40  $\mu$

#### **BLADDER MATERIAL:**

- P = Nitrile rubber (NBR)
- F = Low temp. nitrile rubber
- H = Nitrile for hydrocarbons
- K = Hydrogenated nitrile (HNBR)
- B = Butyl (IIR)
- E = Ethylene-propylene (EPDM)
- N = Chloroprene (Neoprene)
- Y = Epichlorohydrin (ECO)
- V = Fluorocarbon (FPM)

See Table 3.1c and/or Chapter 1.5

### FILLING VALVE CONNECTION:

- 5/8"-UNF std
- 7/8" UNF
- ¼" BSP


FLUID PORT CONNECTION: see 3.1dc - 3.1df -3.1eb - 3.1ec - 3.1fb - 3.1fd

FLOW RATE: see Table 3.1db

WEIGHT: see Table 3.1db - 3.1df



# 3.1.2 HYDRAULIC SYMBOL

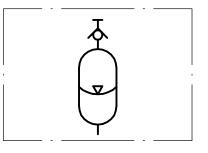

3.1b



# 3.1.3 "AS and ASP" BLADDER ADVANTAGES

- dirt tolerant
- light weight
- compact
- simple construction
- quick response
- works well on water, low lubricity fluids
- quick, easy installation
- low cost

## **3.1.4 DESCRIPTION**

Bladder-type accumulators consist of a seamless cylindrical pressure vessel made of high-tensile steel.

The accumulator is subdivided into a gas and fluid side by an elastic bladder mounted in the interior of the vessel.

The bladder is charged with nitrogen to the specified gas charge pressure P0 by means of gas valve.

When the fluid is pressed into the accumulator, the gas in the bladder is compressed and hence the pressure increased.

The gas volume reduces and on the fluid side, the fluid can flow into the accumulator. As soon as the pressure on the fluid side falls below the gas pressure, the accumulator is emptied.

Oil valve is provided in the oil port of the bladder-type accumulator and closes when the pressure on the gas side is higher than the one on the fluid side.

This prevents draining of the bladder into the oil channel and thus the bladder from being destroyed.

When the minimum operating pressure is reached, a small oil volume is to be maintained between the bladder and the fluid volume (approx. 10% of the nominal capacity of the hydraulic accumulator), in order that the bladder does not hit the valve during every expansion process.

Gas valve consists of external caps, sealing cap, filling valve, gas valve body and rubber coated washer. These parts can be replaced separately. The nameplate shows the technical data and features of the hydraulic accumulator.

## 3.1.5 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subject to the national regulations and directives valid at the place of installation. Bladder accumulator type AS, up to and including 1 litre, must not be CE marked.

Bladder accumulator type ASP, up to and including 1 litre and max. pressure less than 200 bar, must not be CE marked.

For bladder accumulator type AS, greater than 1 litre and, in the case of ASP, greater than 1 litre or 1 litre but with max. pressure higher than 200 bar every shipping batch is complete of a conformity declaration and instruction of use and maintenance and/or all documents requested. All vessel categories (see Table 3.1e) must be protected by means of a pressure relief valve in accordance with Directive 97/23/EC.

# 3.1.6 ACCESSORIES

For support equipment, see Cap. 7 For gas side's safety equipment, see Cap. 8 For fluid side's safety equipment, see Cap. 9 For pre-loading and charging set, see Cap. 11 For other components, see Cap. 12



## 3.1.7 BLADDER-TEMPERATURE-LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, bladder material and the permissive temperature range. (see Section 1.5)

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
Р	Standard nitrile (Perburan)	NBR	-20 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
F	Low temperature nitrile	NBR	-40 ÷ +70	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is there- fore more suitable for low temperatures, but its chemical resistance is slightly lower).
н	Nitrile for hydrocarbons	NBR	-10 ÷ +90	Regular and premium grade slightly aromatic gasoline (and all the li- quids for standard nitrile).
К	Hydrogenated nitrile	HNBR	-30 ÷ +130	The same as with standard nitrile but with excellent performance at high and low temperatures.
В	Butyl	lir	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, Skydrol 500 and 7000, resistance to ozone, aging and weathering.
E	Ethylene-Propylene	EPDM	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many organic and inorganic acids, detergents, solutions of sodium and potassium, pho- sphate ester-based hydraulic fluids, (HFD-R), silicone oils and greases, many polar solvents (alcohol, ketones, esters), Skydrol 500 and 7000, resistance to ozone, aging and weathering.
N	Chloroprene (Neoprene)	CR	-30 ÷ +100	Mineral oils of paraffin, silicone oils and greases, water and aqueous solutions, refrigerants (ammonia, carbon dioxide, Freon), naphthenic mineral oils, low molecular aliphatic hydrocarbons (propane, butane, fuel), brake fluids based on glycol, better resistance to ozone, weathering and aging compared to NBR rubber.
Y	Epichloridrin	ECO	-30 ÷ +110	Mineral oils and greases, aliphatic hydrocarbons (propane, butane and gasoline), silicone oils and greases, water at room temperature, resistance to ozone, aging and weathering.
V	Fluorocarbon	FKM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocar- bons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, car- bon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.


For other hydraulic fluid and/or temperatures, please consult us.

3.1c

# **3.1 E DELADDER ACCUMULATORS type AS and ASP**



## 3.1.8 ORDER CODE

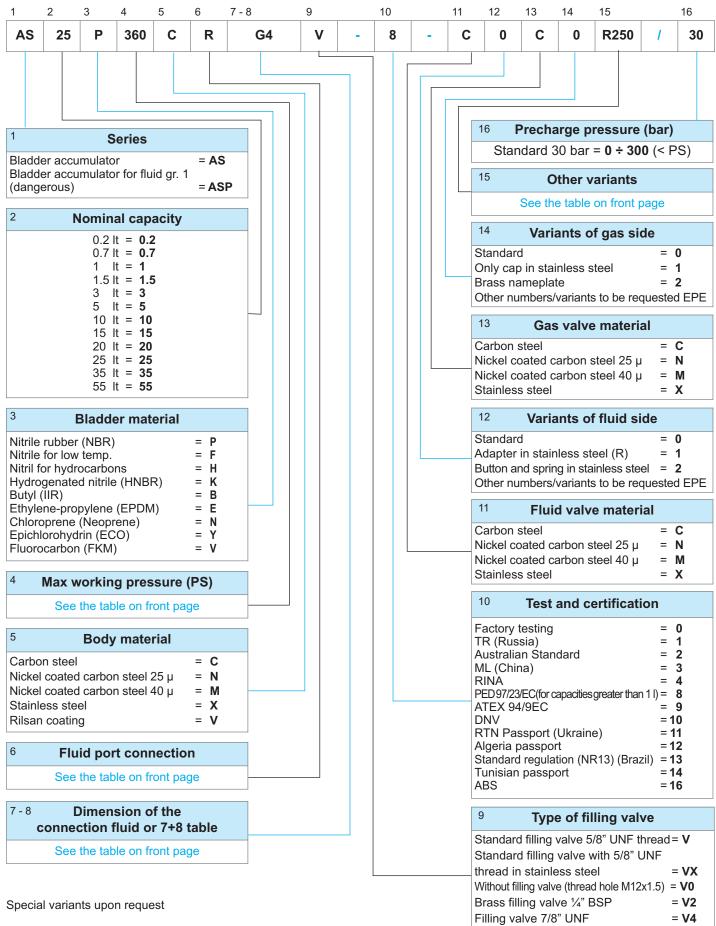

4 M	ax working pressure	e (PS)
Capacity litres	Carbon steel	Stainless steel
0,2 ÷ 3	<b>360</b> (100 only for ASP type)	150 - 210 - 360
5 ÷ 55	<b>360</b> (100 only for ASP type: 210 only for the version with connection L or other pressure related to connections B or U)	80 - 150 - 210 -360
1 ÷ 55	<b>343</b> (for Certification RINA [4])	-

6	Fluid port connection		
For AS0.7÷55	BSP ISO 228		
	with chamfer for OR (std)	=	Α
For AS0.2	BSP ISO 228 (std)	=	G
For AS3÷55	Metric	=	Μ
For AS0.7÷55	NPT-F	=	Р
For AS3÷55	internal thread SAE	=	S
For AS3÷55	adapter for flange SAE 3000 Psi	=	L
For AS3÷55	adapter for flange SAE 6000 Psi	=	н
For AS0.7÷55	flange ANSI	=	В
For AS0.7÷55	flange UNI - DIN	=	U
For AS0.7÷55	square flange	=	Q
For AS0.7÷55	adapter *	=	R
* assembled on the	e fluid valve connection type A		


7	Dimension of the fluid conne	ection	<sup>15</sup> Other variants	
For the A G M P S L H H For U For	e type of connection: $(0.7+1.5 I) \frac{3}{4}$ " $(3\div5 I) 1" \frac{1}{4}$ $(10\div55 I) 2"$ $(0.2 I) \frac{1}{2}"$ $(0.2 I) \frac{1}{2}"$ $(3\div5 I) 40x1.5$ $(10\div55 I) 50x1.5$ $(0.7+1.5 I) \frac{3}{4}"$ $(3\div5 I) 1" \frac{1}{4}$ $(10\div55 I) 2"$ (0.7+1.5 I) 1" 1/16 12UN $(3\div5 I) 1" 5/8 12UN$ $(10\div55 I) 1" 5/8 12UN$ $(10\div55 I) 1" 7/8 12UN$ $(3\div5 I) 1" \frac{1}{4} SAE 3000$ $(10\div55 I) 1" \frac{1}{2} SAE 3000$ 2" SAE 3000 $(3\div5 I) 1" \frac{1}{4} SAE 6000$ $(10\div55 I) 1" \frac{1}{2} SAE 6000$ (2" SAE 6000 $(0.7\div55 I)$ mer. 1" ANSI 1500 = 1/1500 (Pmax = $(0.7\div55 I)$ mer. DN50 PN100 = 50/100 (Pmax = $(0.7\pm55 I)$	= 5 = 7 = 9 = 4 = 40/1.5 = 50/1.5 = 5 = 7 = 9 = 1 1/16-12 = 1 5/8-12 = 1 5/8-12 = 7 = 8 = 9 = 7 = 8 = 9 = 7 = 8 = 9 <b>ION/RATING</b> 250 bar) <b>N/PN</b> 100 bar)	15Other variantsAdapter + rupture disc set at xxx bar (see Section 8.2)Adapter with connection for pressure gauge + rupture disk Adapter + Safety valve type VS224X set at xxx bar Adapter + Needle Valve of $\frac{1}{4}$ " BSP Adapter + Stainless steel needle Valve of $\frac{1}{4}$ BSP Adapter + excluding device with with full scale pressure gauge of xxx bar Adapter + excluding device of 90° with full scale pressure gauge of xxx bar Adapter + safety valve VS11 Adapter + safety valve VS16 Adapter + shut off 2-way valve Adapter + shut off 3-way valve Flushing with degree of contamination ≤class 75-80 µ thick polyurethane paint with colour to be specified Off-shore paint with colour to be specified NORSOK System 1 paint with colour to be specified other variants upon request	= Vxxx = EG2 = EG2X = EMxxx = T11 = T16 = S2 = S3 = Fx = Wxxx = Zxxx = K1
Q	(3÷5 l) 1" ¼ (10÷55 l) 2"	= 7 = 9		
R	(0.7÷55 I) Blind	= 0	8 Dimension	
	(0.7÷55 I) internal thread BSP ISO 228 NPT-F BSPT	= G* = P* = N*	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	
*Variar	SAE Metric nt in table 8	= S*	Dimension in inch - No.of pitch for inch Diameter/pitch	

Special variants on request

**EPE ITALIANA s.r.l.** - Viale Spagna, 112 • 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it



## 3.1.9 DIMENSIONS

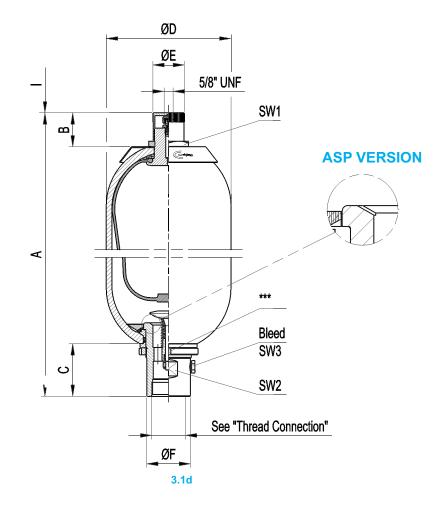

Acc. type AS-ASP in carbon steel	Nominal gas volume litres	Effective gas volume litres	Working pressure <i>bar</i>	Ped cat. fluids of group 2 AS	Ped cat. fluids of group 1 ASP	Max.diff. pressure P2-P1 <i>bar</i>	Flow rate <i>I/min</i>	Max.comp. ratio P0/P2	A mm	B mm	C mm	ØD mm	ØE mm	ØF mm	l mm	SW 1 mm	SW 2 mm	SW 3 mm	Bleed	Acc. dry weight kg
AS/ASP 0,2	0,2	0,2	360	Art.3 (3)	III	100	160	1:4	252 ± 2	23	40	53	20	26	140	24	23	4*	M5	1,7
AS/ASP 0,7	0,7	0,65	360	Art.3 (3)		100	300	1:4	280 ±1,5	47	52	90	25	36	140	32	32	4*	M5	4,2
AS/ASP 1	1	1	360	Art.3 (3)		100	300	1:4	296 ± 5	47	52	114	25	36	140	32	32	4*	M5	5,2
AS/ASP 1,5	1,5	1,5	360	I		100	300	1:4	355 ±5	47	52	114	25	36	140	32	32	4*	M5	6,3
AS/ASP 3	3	2,95	360		IV	100	600	1:4	554 ± 8	47	65	114	25	53	140	32	50	4*	M5	11
AS/ASP 5	5	5	360		IV	100	600	1:4	458 ± 10	47	65	168	25	53	140	32	50	4*	M5	15
AS/ASP 10	10	9,1	360	IV	IV	100	1000	1:4	569 ± 10	60	101	220	60	77	140	70	70	19**	1/4" BSP	33
AS/ASP 15	15	14,5	360	IV	IV	100	1000	1:4	719 ± 10	60	101	220	60	77	140	70	70	19**	1/4" BSP	43
AS/ASP 20	20	18,2	360	IV	IV	100	1000	1:4	879 ± 10	60	101	220	60	77	140	70	70	19**	1/4" BSP	48
AS/ASP 25	25	23,5	360	IV	IV	100	1000	1:4	1044 ±15	60	101	220	60	77	140	70	70	19**	1/4" BSP	59
AS/ASP 35	35	33,5	360	IV	IV	100	1000	1:4	1393 ±15	60	101	220	60	77	140	70	70	19**	1/4" BSP	78
AS/ASP 55	55	50	360	IV	IV	100	1000	1:4	1904 ±15	60	101	220	60	77	140	70	70	19**	1/4" BSP	108
* Allen wren	ich		** Ex. wr	ench		*** see ch	apter 3.	.1.12.2 tab	le 3.1ab											3.1db

\* The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles). \*\* Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and  $\Delta P$  = 5 bar

# 3.1.9.1 STANDARD THREAD CONNECTIONS

Dimensions	Connection Type	Accumulator type	Complete spare valve order code	Ød	ØD mm	ØF mm	H mm
		AS/ASP 0,2	-	-	•	-	-
	٨	AS/ASP 0,7	V 2023-A5-**/*				
	A	AS/ASP 1	V 0004 AE ###	3/4" BSP	28,8	36	19
Ød	BSP ISO 228	AS/ASP 1,5	V 2024-A5-**/*				
ØD 45°	with chamfer	AS/ASP 3	V 2025-A7-**/*		40	50	05
	for OR	AS/ASP 5	V 2044-A7-**/*	1" 1/4 BSP	46	53	25
ØF		AS/ASP 10 ÷ 55	V 2064-A9- **/*	2" BSP	63,35	77	28
		AS/ASP 0,2	V 2004-G4-**/*	1/2" BSP	-	26	15
		AS/ASP 0,7	-	-	-	-	-
	G	AS/ASP 1	-	-	-	-	-
		AS/ASP 1,5	-	-	-	-	-
Ød	BSP ISO 228	AS/ASP 3	-	-	-	-	-
ØF		AS/ASP 5	-	-	-	-	-
		AS/ASP 10 ÷ 55	-	-	-	-	-
		AS/ASP 0,2					
		AS/ASP 0,7					
<b>x</b>	М	AS/ASP 1	-	-	-	-	-
	14-12-	AS/ASP 1,5					
Ød	Metric	AS/ASP 3	V 2025-M40x1.5-**/*	M40x1,5		53	25
ØF		AS/ASP 5	V 2044-M40/1.5-**/*	WI+071,0	•	- 55	25
		AS/ASP 10 + 55	V 2064-M50/1.5-**/*	M50x1,5	-	77	28
		AS/ASP 0,2	-	-	-	-	-
		AS/ASP 0,7	V 2023-P5-**/*				
	Р	AS/ASP 1	V 2024-P5-**/*	3/4" NPT-F	-	36	
		AS/ASP 1,5	V 2024-FJ- /				Thread
Ød	NPT-F	AS/ASP 3	V 2025-P7-**/*	1" 1/4 NPT-F		53	plug gage
ØF		AS/ASP 5	V 2044-P7-**/*	1 1/ <del>1</del> INF 1-1	-		
		AS/ASP 10 ÷ 55	V 2064-A9- **/*	2" NPT-F	-	77	
		AS/ASP 0,2	-	-	-	-	-
		AS/ASP 0,7	V 2023-S1 /16-12-**/-*				
	S	AS/ASP 1	V 2024-S1 /16-12-**/-*	1" 1/16 12 UN	29,16	36	19
f / ød		AS/ASP 1,5	* 2027-01710*12* /*				
Zo ØD	SAE thread	AS/ASP 3	V 2025-S1 5/8-12-**/-*	1" 5/8 12 UN	43,5	53	23
ØF		AS/ASP 5	V 2044-S1 5/8-12-**/-*		-0,0		23
		AS/ASP 10 ÷ 55	V 2064-S1 7/8-12-**/-*	1" 7/8 12 UN	49,84	77	26

\* Gasket material


\*\* Component material

3.1dc

For "ASP" version valve order code become V xxxxP - thread version



## 3.1.9.2 ADAPTER FOR FLANGE SAE 3000/6000 PSI (L/H)

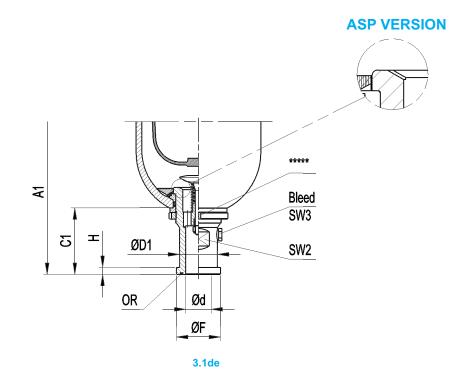

Acc. type								S	AE 3000	(L)		Si	AE6000	(H)			Acc.
AS-ASP in carbon steel	Dim.	A1 mm	C1 <i>mm</i>	SW2 mm	SW3 mm	Bleed	Ød mm	Spare valve order code	ØD1 mm	ØF mm	H mm	Spare valve order code	ØD1 mm	ØF mm	H mm	OR (Included)	dry weight <i>kg</i>
AS / ASP 0,2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
AS / ASP 0,7	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
AS / ASP 1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	- 1
AS / ASP 1,5	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
AC / ACD 2	1"	589 ± 8	100	38	4***	M5	-	-	-	•	-	V 2025-H6-**/*	38	47,6	9,5	0010R4131-*	- 11
AS / ASP 3	1"1/4	578±8	89	30	4	GM	31	V 2025-L7-**/*	43	50,8	8	V 2025-H7-**/*	44	53,3	10,3	0010R4150-*	
AS / ASP 5	1"	493 ± 10	100	38	4***	M5	-	-	•	-		V 2044-H6-**/*	38	47,6	9,5	0010R4131-*	15
AOT AOP D	1"1/4	482 ± 10	89	30	4	CIVI	31	V 2044-L7-**/*	43	50,8	8	V 2044-H7-**/*	44	53,3	10,3	0010R4150-*	10
AS / ASP 10	1"1/2	583 ± 10	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	- 33
AS / ASP IV	2"	003 I 10	115	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	- 33
AS / ASP 15	1"1/2	722 ± 10	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	43
AST AST IS	2"	733 ± 10	115	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	43
AS / ASP 20	1"1/2	893 ± 10	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	48
NO / NOF ZU	2"	090110	110	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	40
AS / ASP 25	1"1/2	1058 ± 15	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	59
NOT MOP 20	2"	1000 110	110	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	- 09
AS / ASP 35	1"1/2	1408 ± 15	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	78
HO / HOF JU	2"	1400 I IJ	110	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	10
AS / ASP 55	1"1/2	1918 ± 15	115	42	19****	1/4"	32	V 2064-L8-**/*	50	60,3	8	V 2064-H8-**/*	51	63,5	12,5	0010R4187-*	108
NO I NOF DO	2"	1910112	110	55	19	BSP	45	V 2064-L9-**/*	62	71,5	9,5	V 2064-H9-**/*	67	77,6	12,0	0010R4225-*	100
* Gasket ma	aterial	** (	Compoi	nent m	aterial	+	** Alle	n wrench **	** Ex. W	rench	***	** see chapter 3	3.1.12 <u>.</u> 2	table 3.1	ab		3.1df

For "ASP" version valve order code become V xxxxP - thread version

8

EPE ITALIANA s.r.l. - Viale Spagna, 112 • 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it 3.1df

ØG

DN

Ød

OR

Т

# 3.1.9.3 FLANGE CONNECTION TYPE ANSI / UNI DIN (B/U)

ØG

DN

т

OR

Ød


	Ø						"A" TY	PE					Ø	-	
Fig. I	ØF									Fig	. 11	-	ØF		3.1ea
	Accumulator type	Spare f	lange code	Ref. D UNI	irective DIN	DN mm	PN bar	Fig.	ØF mm	Øl mm	Ød mm	N° Holes	H mm	G BSP	OR (Included)
	AS / ASP 0,7 - 1 - 1,5	F 2205		2284 6086	2635 2628	20	40 250	II	105 135	75 95	14 18	4 4	23 45	3/4"	0010R2093-*
	A0 / A0D 0 5	F 2211		2284 6086	2635 2628	25	40 250	1	115 150	85 105	14 22	4	51 76	414474	004000450 *
U	AS / ASP 3 - 5	F 2215		2284 6086	2635 2628	32	40 250	II	140 165	100 120	18 22	4	22 55	1"1/4	0010R3150-*
(UNI-DIN)		F 2221 F 2222 F 2223	- ** / *	2282 2284 6086	2633 2635 2628	25	16 40 250	I	115 115 150	85 85 105	14 14 22	4 4 4	49 51 76		
	AS / ASP 10 ÷ 55	F 2227	- ** / *	2284 6086	2635 2628	40	40 250		150 185	110 135	18 25	4	56 91	2"	0010R3218-*
		F 2231	-**/*	2282 2285 6086	2633 2636 2628	50	16 64 250	I	165 185 200	125 135 150	18 22 25	4 4 8	23 40 61		
* Gasket n	naterial		ange mat		LULU		Others si	ze on req		100	20	v	01		3.1eb
	Accumulator type		Spare fla order co	-	Ref. Directive	DN inch	PN Ibs	Fig.	Ø F mm	Ø I mm	Ød mm	N° Holes	H mm	G BSP	OR (Included)

CONNECTION

	type	order code	Ret. Directive	UN inch	PN Ibs	Fig.	ØF mm	Ø I mm	10d mm	N° Holes	H mm	BSP	(Included)
	AS / ASP	F 2207 - ** / *	B16.5	3/4"	300	- 11	117,5	82,5	19	4	40	3/4"	0010R2093-*
	0,7 - 1 - 1,5	F 2208 - ** / *	B16.5	3/4	1500		130	88,9	22,5	4	59	5/4	001062093-
		F 2213 - ** / *	B16.5	1"	300		123,5	88,9	22,5	4	73		
	AS / ASP 3 - 5	F 2214 - ** / *	B16.5		1500	I	149,5	101,6	25,4	4	90	1"1/4	0010R3150-*
В	A3/A3P3-3	F 2217 - ** / *	B16.5	1" 1/4	300	. 11	133,3	98,4	19	4	44	1 1/4	001013130-
(ANSI)		F 2218 - ** / *	B16.5	1/4	1500		159	111,1	25,4	4	58		
(		F 2225 - ** / *	B16.5	1"	300		123,5	88,9	19	4	73		
		F 2226 - ** / *	B16.5	I	1500		149,5	101,6	25,4	4	90		
	AS / ASP	F 2229 - ** / *	B16.5	1" 1/2	300		155,6	114,3	22,2	4	79	2"	0010R3218-*
	10 ÷ 55	F 2230 - ** / *	B16.5	1 1/2	1500		178	123,8	28,5	4	100	2	001013210-
		F 2235 - ** / *	B16.5	2"	400		165	127	19	8	55		
		F 2236 - ** / *	B16.5	2	1500	II	216	165,1	25,4	8	83		
* Gasket m	naterial	** Flange material			Others si	ze on req	uest						3.1ec

**EPE ITALIANA s.r.l.** - Viale Spagna,112 • 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it

# 3.1.9.4 SQUARE FLANGE CONNECTION

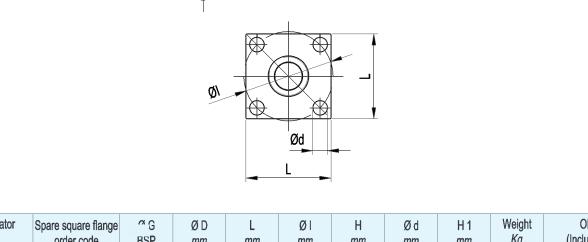

ØG

OR

T

ØD

Ξ

Accumulator type	Spare square flange order code	∽G BSP	Ø D mm	L mm	Øl mm	H mm	Ø d mm	H 1 <i>mm</i>	Weight <i>Kg</i>	OR (Included)
AS / ASP 3 - 5	F 2454 A7 - ** / *	1" 1/4 BSP	26	100	105	25	17.5	49	0,8	0010R3150 - *
AS / ASP 10 ÷ 55	F 2455 A9 - ** / *	2" BSP	32	100	105	20	6.11	49	0,9	0010R3218 - *

\* Gasket material

\*\* Square flange material

Weigth indicated only for blind version

3.1fb

3.1fc

3.1fa

# **3.1.9.5 ADAPTERS**


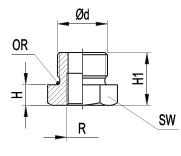


Fig. I

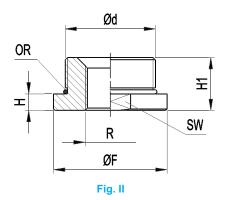

Accumul type		Order code	Ød Acc. connection	R**** Out connections (0 = blind)	Fig.	SW mm	ØF mm	H mm	H1 mm	OR (Included)	Weight <i>Kg</i>
101100	1 15	R - A5*** - ** / *	3/4" BSP	1/8" + 3/8" BSP - NPT - BSPT	1	22		11	28	0010R2093 - *	0,14
AS / ASP U, I	- 1 - 1,0	R - A3 - 7	3/4 037	1/2" BSP - NPT - BSPT		32	-	28	45	0010KZ093-	0,27
AS / ASP	3 - 5	R - A7*** - ** / *	1" 1/4 BSP	1/8" ÷ 1" BSP - NPT - BSPT		48	53	11	32	0010R3150 - *	0,41
AS / ASP 1	0 ÷ 55	R - A9*** - ** / *	2" BSP	1/8" ÷ 1" 1/2 BSP - NPT - BSPT	I	70	75	11	35	0010R3218 - *	0,86
* Gasket mate	erial	** Adapter ma	iterial ***	See chapter 3.1.8 table 7 - 8	Wei	gth indica	ated only	for blind v	ersion		3.1fd

\* Gasket material


10


\*\*\*\* R Out connections type "S" and "M" thread on request

3.1fd



# 3.1.10. SPARE PARTS CODE (STANDARD VERSION)

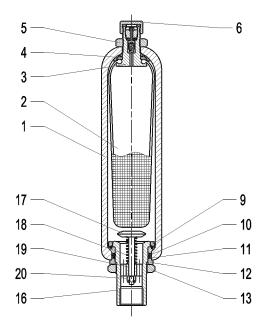

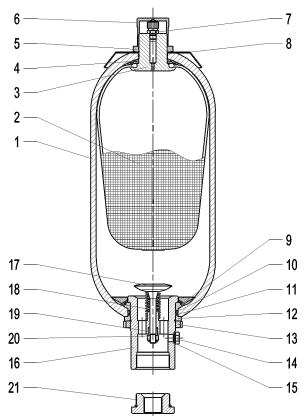

3.1ga

ltem	Description	Q.ty			Ту	/pe		
nem	Description	Genty	AS / ASP 0,2	AS / ASP 0,7	AS / ASP 1 - 1,5	AS / ASP 3	AS / ASP 5	AS / ASP 10 ÷ 55
1	Accumulator shell	1			Not supplied	as spare part		
2	Bladder	1	S 0.2 * - 0	S0.7 * - 0	S1*-0/S1.5*-0	S3 * - 0	S5 * - 0	S10 ÷ 55 * - 0
3	Gas valve body	1	B10026 - **		B10107 - **		B10202- **	B10333 - **
4	Rubber-coated washer	1	B10024 - ** / *	B10104 - ** / *	B1010	6-**/*	B10205 - ** / *	B10334 - ** / *
5	Gas valve looknut	1	B10023 - **		B101	09 - **		B10302 - **
6	Protection cap	1	B10337 / 00 - ** - *		B101	03 - **		B10301 - **
7	Gas-fill valve	1	V 2001 - ** / *			V 2072 - ** - *		
8	Name plate	1	-		D10300A-A		D10300C-A	D10300E-A
9	Retaining ring	1	B10035 - ** / *	B10123 - ** / *	B10127 - ** / *	B10146 - ** / *	B10222 - ** / *	B10317 - ** / *
10	"O" ring	1	0010R4112 - *	0010R4	4150 - *	0010R0159 - *	0010R6212 - *	0010R0181 - *
11	Supporting ring	1	B10038-T	B101	33-T	B10150-T	B10227-T	B10320-T
12	Space ring	1	B10037 - **	B101	20 - **	B102	23 - **	B10319 - **
13	Fluid port ring nut	1	B10039 - **	B101	22 - **		17 - **	B10321 - **
14	Bleed screw	1	-		B101	28 - **		B10316A - **
15	Seal ring	1	-		B101	29 - R		0010T14-1/4 - *
40	Fluid port body std. version	4	B10031 - *** - **	B10115	- *** - **	B10144	- *** - **	B10311 - *** - **
16	Fluid port body "P" version	1	B10031P - *** - **	B10115F	) _ *** _ **		) _ *** _ **	B10311P - *** - **
17	Poppet	1	B10028 - **	B101	11 - **	B102	21 - **	B10310 - **
18	Spring	1	B10029 - **	B101	12 - **	B1014	49 - **	B10322 - **
19	Brake bushing	1	-	B101	13 - **	B102	26 - **	B10314 - **
20	Selflocking nut	1	B10033 - **	B101	16 - **	B102	11 - **	B10315 - **
21	Adapter	1			See chapter 3.	1.9.5 ADAPTER		
Standa	rd gas valve ass. (parts 3 ÷ 7)	1	V 2002 - ** / *	V 2021 - ** / *	V 202	2 - ** / *	V 2042 - ** / *	V 2062 - ** / *
Standar	d fluid port ass. (parts 9 ÷ 20)****	1	V 2004 - *** - ** / *	V 2023 - *** - ** / *	V 2024 - *** - ** / *	V 2025 - *** - ** / *	V 2044 - *** - ** / *	V 2064 - *** - ** / *
	Gasket sets	1	B2010-*	B2030-* <	0010R2050-* B10341-P B10342-P 0010R4150-* B10133-T B10129-R 0010R2093-*	B2031-* B10341-P B10342-P B10342-P B10180-T B10180-T B10129-R 0010R3150-*	0010R2050-* B10341-P B10342-P B10342-P 0010R6212-* B10227-T B10129-R 0010R3150-*	* B2080-* * B2080-* * B10342-P 0010R0181-* B10320-T 0010T14-1/4-*
* Gasket	material ** Component mat	erial	*** See chapter 3.2	2.8 table 6 - 7	**** For "ASP" versio	n valve order code bec	ome V xxxxP - thread	version 3.1gb

**EPE ITALIANA s.r.l.** - Viale Spagna,112 • 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it



# 3.1.11 COMMISSIONING AND MAINTENANCE

#### **Delivery conditions**

Bladder accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order. The precharge value is also on the nameplate of the accumulator.

Depending on the size and quantity ordered, the bladder accumulators are shipped in boxes, in cartons, on pallets or wooden boxes on request. Unless otherwise required, certificates and documentation are provided together with the accumulators.

#### Handling

The original packaging is suitable for handling and storage. Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

However protect from impact the packaging and handle it with care.

#### Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

In addition to six months of storage, the precharge pressure must be to two bar and make sure that inside there is lubrication fluid compatible with bladder polymer.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

#### Marking on the nameplate of the accumulator

With reference to the PED 97/23/EC classification, Article 3, Paragraph 3 and / or risk categories I or II depending to the volume and maximum working pressure, the accumulator indicates the following data:

- Logo, name and country of the manufacturer
- Mounth/year of production
- Product code
- Serial number
- Maximum PS pressure and PT test pressure in bar
- Min. and max. TS working temperature in Celsius
- Volume V in litres
- Group of fluids allowed (II)
- CE marking (for volumes exceding 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

#### It is strictly forbidden to:

- weld, rivet or screw any item of the accumulator
- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

#### Installation

12

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling. Verify that the requested type matches with what stamped on the nameplate.

We recommend using the accumulator with a suitable security valve (see Chapter 8) or a security block type BS (see Chapter 9). This device provides user and equipment protection against possible damage caused by pressure surges and also makes the maintenance of the accumulator easier, facilitating the interception and the discharge.

Provide for a space of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see Chap.11.1).

The accumulators type AS may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

If are not used EPE safety blocks, make sure that the accumulator is connected to the hydraulic circuit by suitable connection devices.

Make sure the fluid is compatible with the elastomer of the bladder.

Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

#### Pre-charge of nitrogen

Normally, the bladder accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit.

For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a bottle equipped with a pressure reducing valve (see Chap.11.3). Use the EPE pre-charge and charging set type PC to check the charging pressure requires, and adjust if necessary. If the pre-charge pressure is lower than required, connect the charging hose on one side and the other side connect it to the nitrogen bottle or to the pressure reducer. Slowly fill the nitrogen in the accumulator until reaching a pressure slightly higher than that set value (+  $10 \div 15\%$ ). Close the bottle and remove the charging hose pipe from the pre-loading set; wait until the gas temperature has stabilized (2 hours) and calibrate the pressure, discharging the excess gas.

Make sure that the gas valve is not subject to losses and, if necessary, use soap and water.

Tighten the protective caps manually.

#### Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application.
- Ensure that the hydraulic pressure never exceeds the max allowed pressure (PS) shown on the accumulator shell.
  - To avoid this risk, use a safety item (see Chap. 9).

#### Maintenance

- Periodically check the pre-charge pressure of the gas: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test yearly. For heavy-duty applications, check the pre-charge every 6 months.
- Periodically (yearly) carry out a visual inspection of the accumulator in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the accumulator.



### Repair

If for failure, scheduled check or retest it is necessary to remove the accumulator from the system, prior to removal, isolate the accumulator from the installation and discharge pressure of the liquid.

All bladder EPE accumulators of the AS and ASP series may be repaired. It may consist in replacing the bladder, the seals, the pre-charge valve and/or the parts of the gas and fluid valve.

For reasons of functionality and security, it is recommended to use only original spare parts.

#### Disassembly

- Fasten the accumulator firmly in a vice or on a bench in a horizontal position, taking care not to damage the outer surface.



#### 3.1h

- If you have not already carried out, unscrew the cap nut first and then the valve cap of the gas valve.



3.1i

3.1i

- Allow gas escapes from the bladder with the help of the check valve until a pressure of 0 is displayed. Check if the bladder is now de-pressurizing an open valve.



- Undo slotted round nut for hook wrench by using the hook wrench.



- Remove the slotted nut and the retaining ring.



- Push enough oil valve into the housing until the sealing ring and the washer can be removed.



- Remove gas valve, unscrew the nut on the gas valve and remove the nameplate.



- Remove the sealing ring and the washer.

3.11

# **3.1 E 09-14** BLADDER ACCUMULATORS type AS and ASP





3.10

-

- Remove the retaining ring, take it out, by carefully pushing the ring together.



- Remove the oil valve from the shell.



- Fold bladder somewhat and withdraw by turning it slightly.

#### Refitting

Tightening torques in Nm									
	0.2 I	0.7-1.5 l	3 - 5 I	10-55 I					
Fluid port ring nut	60 +10	100 +20	200 +50	450 +50					
Bleed screw	3 +1	5 +1	5 +1	30 +10					
Gas valve locknut	50 +10	80 +20	100 +20	150 +30					
Filling valve V - VX - V2	-	30 +5	30 +5	30 +5					
Valve insert V4	-	0.3 +0.2	0.3 +0.2	0.3 +0.2					

- Cleaning and testing: clean all metallic parts on accumulator using an organic degraser - visual inspection of oil valve parts (valve poppet, spring, nut, breake bushing)
- check valve for sluggishness

- Clean bladder, i.e. using isopropanol. Visual inspection of bladder for faults - inner inspection of shell for signs of corrosion. In event of coated shell, check the condition of the coating.

Replace the parts deemed to be bad; the o-rings must always be replaced (see spare parts Section 3.1.10).



- 3.1s
- Drain air from bladder by pressing together.



#### 3.1t

3.1q

- Carefully moisten the inside of the bladder and the shell with the same medium operation. That will be used during operation.



- **EPE ITALIANA s.r.l.** Viale Spagna, 112 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it
- 14

- Reinstall according to this sequence: o-ring, support ring and space ring.



- Screw the slotted nut and centre the parts on the oil valve by using a plastic hammer.



- Bleed screw with sealing ring.



- Mount the bleed screw with its sealing ring.



- Tighten the hexagon nut SW1 on the gas valve.



- Mount the filling valve.

#### Pre-charge

3.1v

3.1w



3.1zz

3.1z

- Screw the pre-charge PC equipment on the gas valve.
- Connect the equipment to the cylinder of nitrogen or to the pressure reducer with the inflation tube.
- Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the cylinder and remove the connecting pipe from the equipment.
- Wait until the gas temperature has stabilized (2 hours).
- Calibrate the pressure discharging the excess gas.

Make sure that the gas valve is not subject to losses and, if necessary, use soap and water.

Tighten the protective caps manually.

#### Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve. If needed, proceed decontaminating in relation to the fluid used prior to demolition.

3.1y

**EPE ITALIANA s.r.l.** - Viale Spagna,112 • 20093 Cologno Monzese (Mi) Italy Tel.: +39 02 25459028 • Fax: +39 02 25 25459773 • E-mail: epeitaliana@epeitaliana.it • Internet: www.epeitaliana.it




# 3.1.12 REPAIR TOOLS

## 3.1.12.1 BLADDER PULL ROD

The pull rod screwed to the gas valve of the bladder for easy assembly into shell during reassembly. Pull rod is complete with fitting for EPE gas valve and 3 extension segments to accommodate all size of accumulators.

Code for complete kit: B2505

#### Dimension

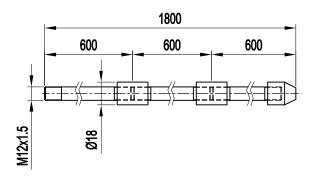

3.1aa


## 3.1.12.2 SPANNER WRENCH

Fits all standard size bladder accumulator. It is used to remove or install lock nut on fluid port assembly.

0,7÷1,5 lt code **2506/58** 3÷5 lt code **2506/68** 

10÷55 It code 2506/105

#### Dimension

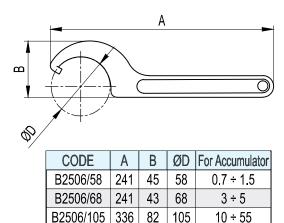


3.1ab

#### 3.1.12.3 LIFTING HOOK

To be used for the safe lifting of mounted accumulators: For accumulators  $0,7\div5$  It (M22x1,5) code **B2507/2** For accumulators  $10\div55$  It (M50x1,5) code **B2507/5** For accumulators V4 (7/8" UNF) code **B2507/7** 

Dimension

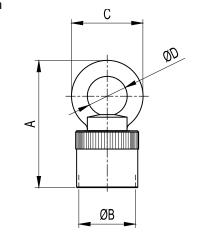


CODE	А	ØВ	С	ØD	For Accumulator
B2507/2	100	M22x1.5	63	35	0.7 ÷ 1.5
B2507/5	112	M50x1.5	63	35	3 ÷ 5
B2507/7	100	7/8" UNF	63	35	10 ÷ 55

3.1ac

# 3.1.12.4 CORE TOOL

The core tool is used to remove and reinstall the valve core type V4. Code  $\ensuremath{\text{B2508}}$ 

Dimension

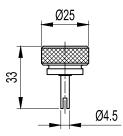

3.1ad

Reproduction is forbidden. In the spirit of continuous improvement, our products may be changed.